



IMPORTANT SAFEGUARDS

1. Read all instructions before using.
2. Do not touch hot surfaces.
3. To protect against electric shock, do not immerse cord in water or any other liquid.
4. Close supervision is necessary when any appliance is used near children.
5. Allow unit to cool before removing warming chamber basket.
6. Do not operate this unit with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner.
7. The First Years® does not make, offer, or recommend any accessory attachments for this unit. The use of any kind of accessory attachments may cause injuries.
8. For household use only. Do not use outdoors.
9. Do not let cord hang over edge of table or counter, or touch hot surfaces.
10. Do not place on or near a hot gas or electric burner.
11. Extreme caution must be used when moving an appliance containing hot liquids.
12. Do not use this unit for anything other than its intended use outlined in this manual.
13. This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit into a polarized outlet only one way, If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way.
14. This product does not require preheating.
15. The user should not attempt to service or repair the unit.
16. No serviceable parts inside.
17. Permanently Installed - Unplug from the outlet when not in use, before putting on or taking off parts, and before cleaning.
18. A short power-supply cord (or detachable power-supply cord) should be used to reduce the risk resulting from becoming entangled in or tripping over a longer cord. Longer detachable power-supply cords or extension cords are available and may be used if care is exercised in their use. If a longer detachable power-supply cord or extension cord is used, the marked electrical rating of the cord set or extension cord should be at least as great as the electrical rating of the appliance; and the cord should be arranged so that it will not drape over the countertop or tabletop where it can be pulled on by children or tripped over unintentionally.
19. Save these instructions for future use.

Water Measurement Grid

Bottle Style	Wide-mouth bottles		Standard bottles		Disposable bottles	
Bottle Size	5 oz.	9 oz.	4 oz.	8 oz.	4 oz.	8 oz.
Cool bottle (from cooler or refrigerator)	6	10	7	8	2	4
Warm bottle (room temperature)	5	9	7	8	1	3
Baby Food Jars (Use lift-out basket; remove jar cover before heating)	All Sizes: 9					

Breast Milk Water Measurement Grid

Bottle Style	Wide-mouth bottles		Standard bottles		Disposable bottles	
Bottle Size	5 oz.	9 oz.	4 oz.	8 oz.	4 oz.	8 oz.
Amount of Breast Milk						
2 oz.	4	4	7	7	1	1
4 oz.	7	7	4	4	2	2
6 oz.		4		6		3
8 oz.		4		7		4

= Measuring Container, fill twice

NOTE: If your bottle is too cool after heating try adding a little more water next time. If your bottle is too hot after heating try adding a little less water next time.

TO USE

1. Insert basket in warming chamber and position your bottle in the basket.

For standard reusable bottles (straight or angled): Snap the adapter ring onto the top of the warming chamber. The ring will keep the bottle properly centered for even heating.

For disposable bottles and baby food jars: place into the lift-out basket and insert into the warming chamber. Do not remove the larger basket.

NOTE: Remove lid of baby food jar before placing in the lift-out basket. For wide-neck bottles, neither lift out basket nor adapter ring is needed.

Never place a bottle or jar in the warming chamber without using one of the baskets. Bottle or jar could be damaged or overheated.



2. Press the ON button. It will light up to indicate that the unit is heating.

3. When the light goes out, the warming cycle is complete. The heater will shut off automatically. Remove bottle immediately so it will not continue heating. Bottles/Jars may be hot. Remove from chamber and allow 1 minute to cool before handling.

NOTE: If bottle gets too warm, use slightly less water next time. If bottles do not seem quite warm enough, use slightly more water.

Wait 10 minutes before heating another bottle.

The heating element must cool before the unit can be used again.

- Not recommended for use with glass feeding bottles as sudden temperature change may cause glass to break.
- Do not place your hands in or around the warming chamber during heating.
- To prevent injury, always shake bottle well, and test temperature of contents before giving bottle to your child.

TO CLEAN

Measuring container, baskets, and adapter ring: Dishwasher-safe (top rack only).

Measuring container should be placed in a dishwasher basket or wash in warm water using mild liquid soap. Rinse with clear water.

Bottle warmer unit: Always turn OFF and unplug before cleaning. Wipe surface of unit as well as inside of warming chamber with a damp cloth or sponge using mild liquid soap. Wipe with clear water. Air dry.

Do not immerse in water. Do not use scouring pads, solvents, or abrasive cleaners, as these could damage the unit.

Warming chamber: Mineral deposits (usually white in color) may form on the inner surfaces of the warming chamber and can cause damage to the unit.

To remove them:

1. Unplug the unit.
2. Remove the basket, and wash separately as indicated above.

3. Pour 2 oz. vinegar into the warming chamber and let it stand for an hour or two (longer if necessary).
4. Pour out the vinegar and rinse the chamber two or three times by pouring in, then emptying out, 3 or 4 oz. of plain tap water.

Do not immerse the Bottle Warmer in water. Wipe dry or air dry.

PRODUCT RETURN POLICY

If your QuickServe Warmer is not working, please contact our Parent Service Center at 1-800-704-8697 or visit us at www.learningcurve.com.

WARRANTY

Our Limited Warranty and Warranty Period

When we use the terms "we," "us" and "our," we are referring to the Company, and when we use the terms "you" and "your" we mean the original end-user customer. Our products are guaranteed to be free from defects in material and workmanship under normal and intended use for a period of 90 days from the date of your purchase. The 90 day warranty above became effective on February 18, 2005 as to Learning Curve Products. For all Learning Curve Products purchased prior to February 18, 2005 and for all Learning Curve products purchased after February 18, 2005 where the product packaging, labeling or product inserts accompanying the product indicated that the product has a lifetime guarantee or is unconditionally guaranteed for life, Learning Curve will continue to honor such guarantee.

Replacement/Credit

If our product fails to meet our limited warranty during the warranty period, we will, at our option, replace the product free of charge, or provide you with a replacement of comparable value. Any replacement may be conditioned upon the return of the defective product to us at your expense.

What Our Limited Warranty Does Not Cover

We offer this limited warranty only when the product is used by the original end-user customer. We offer no other warranty. Additionally, while our warranty is excellent, there are other limits to it. We offer NO WARRANTY in cases of damage in transit, inadequate care or neglect, abuse, abnormal use, misuse, accidents, normal wear and tear damage due to environmental or natural elements, failure to follow product instructions, immersion in water (except for products specifically identified by us in writing as intended for water use), battery leakage or improper installation, improper storage or maintenance of the products, or improper service or causes not arising out of defects in materials and workmanship.

Disclaimer of Other Warranties

THE EXPRESS WARRANTIES IN THE PRECEDING SECTION ARE EXCLUSIVE AND IN LIEU OF ALL OTHER WARRANTIES. However, to the extent applicable law does not permit disclaimers of certain implied warranties, such warranties are limited to the warranty period identified above. Some states and countries do not allow limitations on how long an implied warranty lasts, so the above limitations may not apply to you.

Limitation on Damages

In no event shall we be liable for incidental, compensatory, punitive, consequential, indirect, special or other damages. our aggregate liability with respect to defective products is limited to the monies paid to us.

State Variations

This warranty gives you specific legal rights, and you may also have other rights which vary based on state, province or country.

Contact Us

If you have a warranty claim or request, or any customer care questions, please contact us:

The First Years: 800-533-6708 or via email at parentservicecenter@thefirstyears.com

Learning Curve: 800-704-8697 or via email at cs@learningcurve.com